


# HEALTH CARE SOLUTIONS FROM PLASKOLITE

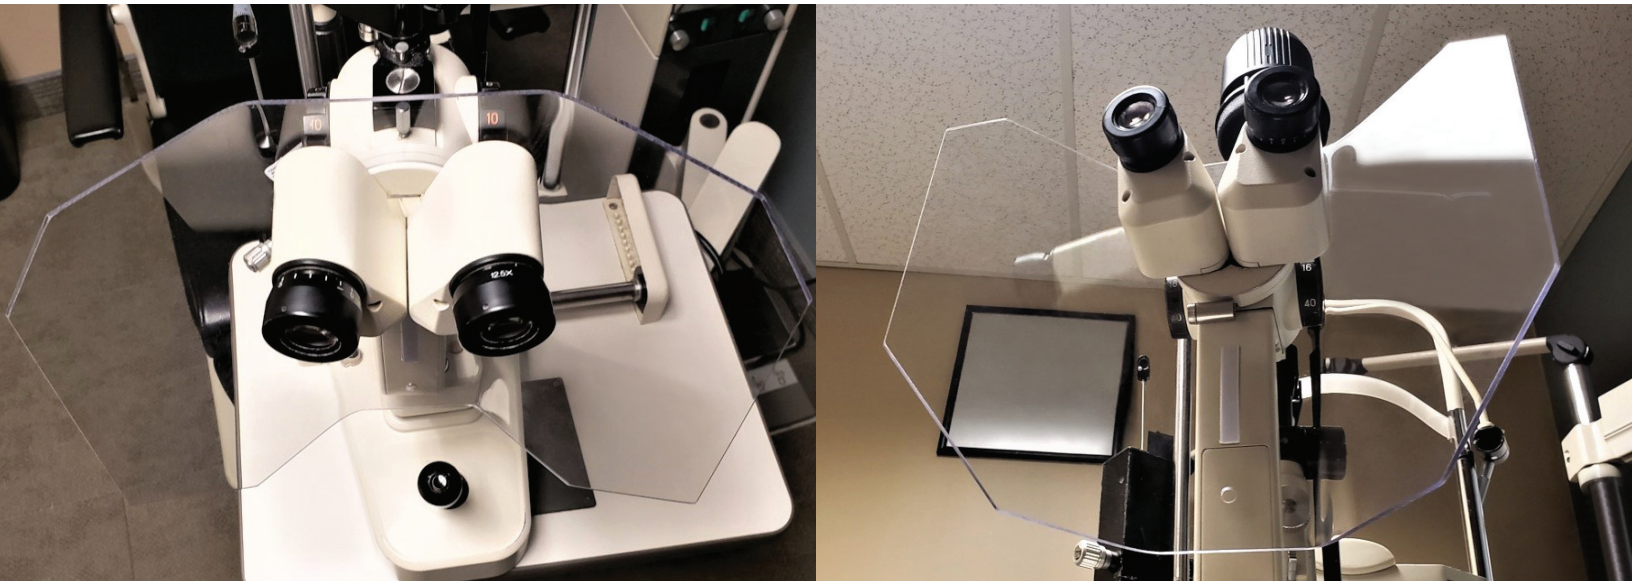

## TRANSPARENT BARRIERS FOR DOCTOR AND PATIENT PROTECTION

### INSTALLING CLEAR PANELS OF THERMOPLASTIC SHEETS HELP PROTECT DOCTORS AND PATIENTS

We utilize OPTIX® Acrylic, VIVAK® PETG and TUFFAK® Polycarbonate sheets to help with your ever-growing need for partitions and barriers.

- » Ideal for optometrist slit-lamps
- » High clarity
- » Easy to clean\*
- » Cut to size with standard tools
- » All sheets can be run to size - call for details

\*See page 2 for more information on sanitizing and disinfecting thermoplastics



## PLASKOLITE

© 2020 PLASKOLITE, LLC  
OPTIX®, VIVAK® and TUFFAK® are registered trademarks of Plaskolite LLC



# Alro Plastics

[alroplastics.com](http://alroplastics.com)

#### CHICAGO

279 Madsen Drive  
Suite #102  
Bloomington, IL 60108  
Ph: (888) 877-2576

#### CLEARWATER

12171 62<sup>nd</sup> Street  
Suite #150  
Largo, FL 33773  
Ph: (727) 573-1480

#### DETROIT

1750 E. Heights Drive  
Madison Heights, MI 48071  
Ph: (800) 877-2576

#### EVANSVILLE

1414 Baker Avenue  
Evansville, IN 47710  
Ph: (812) 424-5554

#### GRAND RAPIDS

4670 60th S.E.  
Grand Rapids, MI 49512  
Ph: (616) 656-2820

#### JACKSON

2218 Enterprise  
Jackson, MI 49204  
Ph: (517) 787-5500

#### LOUISVILLE

5500 Shepherdsville Rd  
Suite #300  
Louisville, KY 40228  
Ph: (502) 968-9980

# HEALTH CARE SOLUTIONS FROM PLASKOLITE

## DISINFECTING ACRYLIC, POLYCARBONATE AND PETG

When disinfecting OPTIX® Acrylic, TUFFAK® Polycarbonate and VIVAK® PETG, proper procedures should be taken. To minimize the risk of damage, use only compatible household

cleaners as outlined below. For more details please contact the Plaskolite Technical Service Group at **800.848.9124** with any questions.

### Disinfectants for Plaskolite Products

Product/Brand	Manufacturer	Products	Compatibility**
TUFFAK	sBioMed, LLC	Steriplex SD	Compatible
TUFFAK	Safetec of America	Safetec surface wipes	Compatible
TUFFAK	CONTEC Healthcare	Peridox RTU	Compatible
TUFFAK	CONTEC Healthcare	Prosat sterile wipes PS-911EB	Compatible
TUFFAK	Generic	Hydrogen peroxide 3%-5%	Compatible
TUFFAK	Generic	Isopropyl alcohol 70%	Compatible
TUFFAK	Generic	Warm dish washing soap solution	Compatible
OPTIX	Generic	Hydrogen peroxide 3%-5%	Compatible
OPTIX	Generic	Bleach - household laundry grade	Compatible
OPTIX	Generic	Quaternary ammonium compounds @ use dilution	Compatible
OPTIX	Generic	Isopropyl alcohol - diluted with water to 30% strength	Compatible
OPTIX	Generic	Warm dish washing soap solution	Compatible
VIVAK	Generic	Hydrogen peroxide 3%-5%	Compatible
VIVAK	Generic	Isopropyl alcohol 70%	Compatible
VIVAK	Generic	Warm dish washing soap solution	Compatible
TUFFAK	The Clorox Company	Clorox® health care bleach germicidal cleaner	Not Compatible
TUFFAK	Unimed Corp	Accel TB	Not Compatible
TUFFAK	The Clorox Company	Clorox® broad spectrum quaternary disinfectant cleaner	Not Compatible
TUFFAK	Zep Inc	ZEP 40	Not Compatible
TUFFAK	Zep Inc	ZEP Spirit II	Not Compatible
TUFFAK	PDI Inc	PDI Super Sani-Cloth	Not Compatible
TUFFAK	Reckitt Benckiser	Lysol disinfectant spray brand III original	Not Compatible
TUFFAK	Fiberlock Technologies Inc	Shockwave disinfectant	Not Compatible
TUFFAK	CONTEC Healthcare	Preempt RTU multi-surface disinfectant cleaner	Not Compatible
TUFFAK	The Clorox Company	Clorox® household bleach - all dilutions	Not Compatible
OPTIX	Generic	Ethyl alcohol - pharmacy grade	Not Compatible

**SPECIAL NOTES:** Cleaning products were tested on flat uncoated Tuffak Polycarbonate, Optix Acrylic and Vivak PETG sheet products. Do not use incompatible cleaners or disinfectants on sheet products. Generally speaking, soap and water or hydrogen peroxide disinfectants work best on these products.

\*\*Because manufacturers sometimes change their formulas without notification compatibility in perpetuity can not be presumed.

These suggestions and data are based on information we believe to be reliable. They are offered in good faith, but without guarantee, as conditions and methods of use are beyond our control. We recommend that the prospective user determine the suitability of our materials and suggestions before adopting them on a commercial scale.



# Alro Plastics

[alroplastics.com](http://alroplastics.com)

**CHICAGO**  
279 Madsen Drive  
Suite #102  
Bloomington, IL 60108  
Ph: (888) 877-2576

**CLEARWATER**  
12171 62<sup>nd</sup> Street  
Suite #150  
Largo, FL 33773  
Ph: (727) 573-1480

**DETROIT**  
1750 E. Heights Drive  
Madison Heights, MI 48071  
Ph: (800) 877-2576

**EVANSVILLE**  
1414 Baker Avenue  
Evansville, IN 47710  
Ph: (812) 424-5554

**GRAND RAPIDS**  
4670 60th S.E.  
Grand Rapids, MI 49512  
Ph: (616) 656-2820

**JACKSON**  
2218 Enterprise  
Jackson, MI 49204  
Ph: (517) 787-5500

**LOUISVILLE**  
5500 Shepherdsville Rd  
Suite #300  
Louisville, KY 40228  
Ph: (502) 968-9980