

CASHIER / TELLER BARRIER SOLUTIONS

FROM PLASKOLITE




TRANSPARENT BARRIERS FOR CUSTOMER AND EMPLOYEE PROTECTION

INSTALLING CLEAR PANELS OF THERMOPLASTIC SHEETS HELP PROTECT EMPLOYEES AND CUSTOMERS

We produce OPTIX® Acrylic, VIVAK® PETG, HYGARD® and TUFFAK® Polycarbonate sheets to help with your ever-growing need for partitions and barriers.

- » High clarity
- » Easy to clean*
- » Cut to size with standard tools
- » All sheets can be run to size - call for details

*See page 2 for more information on sanitizing and disinfecting thermoplastics

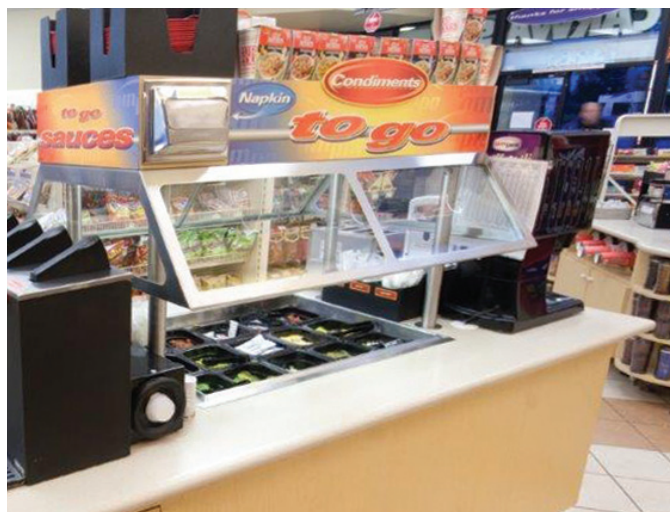

© 2020 PLASKOLITE, LLC
OPTIX®, VIVAK® and TUFFAK® are registered trademarks of Plaskolite LLC

PLASKOLITE



Alro Plastics

alroplastics.com

CHICAGO
279 Madsen Drive
Suite #102
Bloomington, IL 60108
Ph: (888) 877-2576

CLEARWATER
12171 62nd Street
Suite #150
Largo, FL 33773
Ph: (727) 573-1480

DETROIT
1750 E. Heights Drive
Madison Heights, MI 48071
Ph: (800) 877-2576

EVANSVILLE
1414 Baker Avenue
Evansville, IN 47710
Ph: (812) 424-5554

GRAND RAPIDS
4670 60th S.E.
Grand Rapids, MI 49512
Ph: (616) 656-2820

JACKSON
2218 Enterprise
Jackson, MI 49204
Ph: (517) 787-5500

LOUISVILLE
5500 Shepherdsville Rd
Suite #300
Louisville, KY 40228
Ph: (502) 968-9980

CASHIER / TELLER BARRIER SOLUTIONS

FROM PLASKOLITE

DISINFECTING ACRYLIC, POLYCARBONATE AND PETG

When disinfecting OPTIX® Acrylic, TUFFAK® Polycarbonate and VIVAK® PETG, proper procedures should be taken. To minimize the risk of damage, use only compatible household

cleaners as outlined below. For more details please contact the Plaskolite Technical Service Group at **800.848.9124** with any questions.

Disinfectants for Plaskolite Products

Product/Brand	Manufacturer	Products	Compatibility**
TUFFAK	sBioMed, LLC	Steriplex SD	Compatible
TUFFAK	Safetec of America	Safetec surface wipes	Compatible
TUFFAK	CONTEC Healthcare	Peridox RTU	Compatible
TUFFAK	CONTEC Healthcare	Prosat sterile wipes PS-911EB	Compatible
TUFFAK	Generic	Hydrogen peroxide 3%-5%	Compatible
TUFFAK	Generic	Isopropyl alcohol 70%	Compatible
TUFFAK	Generic	Warm dish washing soap solution	Compatible
OPTIX	Generic	Hydrogen peroxide 3%-5%	Compatible
OPTIX	Generic	Bleach - household laundry grade	Compatible
OPTIX	Generic	Quaternary ammonium compounds @ use dilution	Compatible
OPTIX	Generic	Isopropyl alcohol - diluted with water to 30% strength	Compatible
OPTIX	Generic	Warm dish washing soap solution	Compatible
VIVAK	Generic	Hydrogen peroxide 3%-5%	Compatible
VIVAK	Generic	Isopropyl alcohol 70%	Compatible
VIVAK	Generic	Warm dish washing soap solution	Compatible
TUFFAK	The Clorox Company	Clorox® health care bleach germicidal cleaner	Not Compatible
TUFFAK	Unimed Corp	Accel TB	Not Compatible
TUFFAK	The Clorox Company	Clorox® broad spectrum quaternary disinfectant cleaner	Not Compatible
TUFFAK	Zep Inc	ZEP 40	Not Compatible
TUFFAK	Zep Inc	ZEP Spirit II	Not Compatible
TUFFAK	PDI Inc	PDI Super Sani-Cloth	Not Compatible
TUFFAK	Reckitt Benckiser	Lysol disinfectant spray brand III original	Not Compatible
TUFFAK	Fiberlock Technologies Inc	Shockwave disinfectant	Not Compatible
TUFFAK	CONTEC Healthcare	Preempt RTU multi-surface disinfectant cleaner	Not Compatible
TUFFAK	The Clorox Company	Clorox® household bleach - all dilutions	Not Compatible
OPTIX	Generic	Ethyl alcohol - pharmacy grade	Not Compatible

SPECIAL NOTES: Cleaning products were tested on flat uncoated Tuffak Polycarbonate, Optix Acrylic and Vivak PETG sheet products. Do not use incompatible cleaners or disinfectants on sheet products. Generally speaking, soap and water or hydrogen peroxide disinfectants work best on these products.

**Because manufacturers sometimes change their formulas without notification compatibility in perpetuity can not be presumed.

These suggestions and data are based on information we believe to be reliable. They are offered in good faith, but without guarantee, as conditions and methods of use are beyond our control. We recommend that the prospective user determine the suitability of our materials and suggestions before adopting them on a commercial scale.



Alro Plastics

alroplastics.com

CHICAGO

279 Madsen Drive
Suite #102
Bloomington, IL 60108
Ph: (888) 877-2576

CLEARWATER

12171 62nd Street
Suite #150
Largo, FL 33773
Ph: (727) 573-1480

DETROIT

1750 E. Heights Drive
Madison Heights, MI 48071
Ph: (800) 877-2576

EVANSVILLE

1414 Baker Avenue
Evansville, IN 47710
Ph: (812) 424-5554

GRAND RAPIDS

4670 60th S.E.
Grand Rapids, MI 49512
Ph: (616) 656-2820

JACKSON

2218 Enterprise
Jackson, MI 49204
Ph: (517) 787-5500

LOUISVILLE

5500 Shepherdsville Rd
Suite #300
Louisville, KY 40228
Ph: (502) 968-9980